



User Guide

IESM-Ethernet

Reference: **WA_DEV_Fastrk_UGD_014**

Revision: **001**

Date: **August 12, 2008**

wavecom[®]
Make it wireless

Operating Systems | Plug-Ins | Integrated Development Environments | **Wireless CPUs** | Services


Plug and Play Fastrack Supreme Wireless CPU[®]

IESM-Ethernet User Guide

Reference: WA_DEV_Fastrk_UGD_014

Revision: 001

Date: August 12, 2008

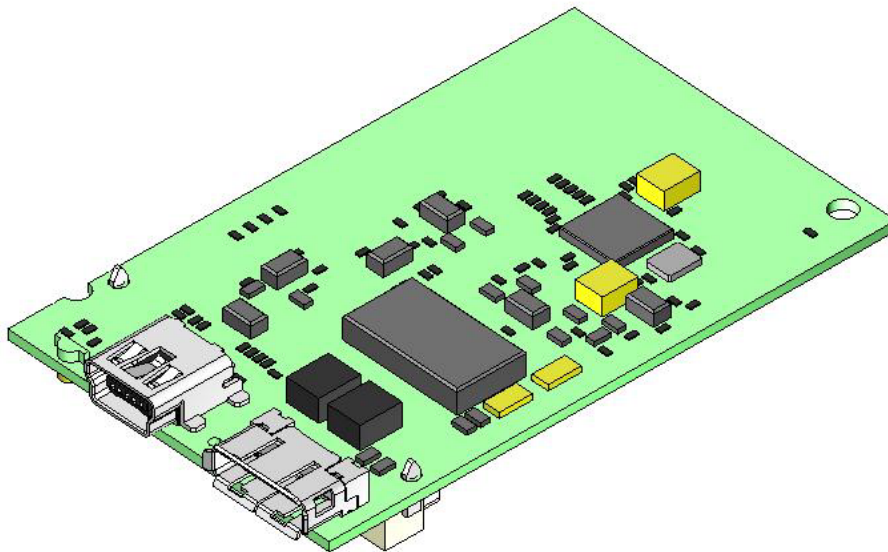

Document History

| Revision | Date | List of Revisions | |
|----------|-----------------|-------------------|--|
| 001 | March 13, 2008 | Creation | |
| | May 30, 2008 | Updated | |
| | June 13, 2008 | Updated | |
| | August 12, 2008 | Updated | |

Overview

The Internal Expansion Socket Module (IESM) is a Plug & Play device to expand the functionality of a standard Fastrack Supreme 10/20 into a state of the art Ethernet device for machine to machine applications.

With the IESM it is possible to utilize the Internal Expansion Socket (IES) which opens wide applications for Fastrack Supreme 10 and Supreme 20 by simply plugging in.

Fastrack Supreme with IESM-Ethernet plugged-in may utilize one or more AT Plug-Ins of the powerful Open AT[®] software suite. Open AT[®] is the world's most comprehensive cellular development environment, which allows embedded standard ANSI C applications to be natively executed directly on the Wireless CPU[®].

Topics covered by this document;

- General description
- Functional description
- Basic services available
- Technical characteristics
- Installing and using the IESM-Ethernet
- User-level troubleshooting
- Recommended accessories to be used with the product

Note 1:

This document covers the IESM-Ethernet Plug & Play alone and does not include;

- The programmable capabilities provided via the use of Open AT[®] Software Suites.
- The development guide for IESM for expanding the application feature through the IES interface.

For details, please refer to the documents shown in the "Reference documents" section.

RoHS Directive

The Fastrack Supreme and IESM-Ethernet are now compliant with RoHS Directive 2002/95/EC, which sets limits for the use of certain restricted hazardous substances. This directive states that "from 1st July 2006, new electrical and electronic equipment put on the market does not contain lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE)".

Plug & Plays which are compliant with this directive are identified by the RoHS logo on their label.



Disposing of the product

This electronic product is subject to the EU Directive 2002/96/EC for Waste Electrical and Electronic Equipment (WEEE). As such, this product must not be disposed off at a municipal waste collection point. Please refer to local regulations for directions on how to dispose off this product in an environmental friendly manner.







Cautions

Information furnished herein by WAVECOM is accurate and reliable. However, no responsibility is assumed for its use. Please read carefully the safety recommendations given in Chapter 10 for an application based on Fastrack Supreme Plug & Play.

IESM are ESD sensitive, it is recommended to use standard ESD precautions, as described in the following norm:

JEDEC standard JESD625-A, Requirements for Handling Electrostatic Discharge-Sensitive (ESDS) Devices.

Trademarks

    [®], inSIM[®], "YOU MAKE IT, WE MAKE IT WIRELESS"[®], WAVECOM[®], Wireless Microprocessor[®], Wireless CPU[®], Open AT[®] and certain other trademarks and logos appearing on this document, are filed or registered trademarks of Wavecom S.A. in France and/or in other countries. All other company and/or product names mentioned may be filed or registered trademarks of their respective owners.

Copyright

This manual is copyrighted by WAVECOM with all rights reserved. No part of this manual may be reproduced, modified or disclosed to third parties in any form without the prior written permission of WAVECOM.

No Warranty/No Liability

This document is provided "as is". Wavecom makes no warranties of any kind, either expressed or implied, including any implied warranties of merchantability, fitness for a particular purpose, or noninfringement. The recipient of the documentation shall endorse all risks arising from its use. In no event shall Wavecom be liable for any incidental, direct, indirect, consequential, or punitive damages arising from the use or inadequacy of the documentation, even if Wavecom has been advised of the possibility of such damages and to the extent permitted by law.

Web Site Support

| | |
|---|--|
| General information about Wavecom and its range of products: | www.wavecom.com |
| Specific support is available for the Fastrack Supreme Plug & Play Wireless CPU®: | www.wavecom.com/fastracksupreme |
| Carrier/Operator approvals: | www.wavecom.com/approvals |
| Open AT® Introduction: | www.wavecom.com/OpenAT |
| Developer support for software and hardware: | www.wavecom.com/forum |

Table of Contents

| | | |
|----------|---|-----------|
| 1 | REFERENCES | 11 |
| 1.1 | Reference Documents..... | 11 |
| 1.1.1 | Open AT® Software Documentation | 11 |
| 1.1.2 | AT Software Documentation..... | 11 |
| 1.1.3 | Fastrack Supreme Related Documents..... | 11 |
| 1.1.4 | IESM Related Documents | 11 |
| 1.2 | Abbreviations | 12 |
| 2 | PACKAGING | 15 |
| 2.1 | Contents..... | 15 |
| 2.2 | Packaging Box..... | 16 |
| 2.3 | Production Sticker | 17 |
| 3 | GENERAL INFORMATION | 18 |
| 3.1 | Description | 18 |
| 3.2 | External Connections..... | 19 |
| 3.2.1 | Mini-B USB Connector..... | 19 |
| 3.2.2 | 10-Pin Interface Socket..... | 20 |
| 3.2.3 | IES 50-pin Connector..... | 21 |
| 4 | IESM ETHERNET BASIC REQUIREMENTS | 23 |
| 4.1 | Ethernet Requirements | 23 |
| 4.2 | USB Requirements | 23 |
| 5 | FEATURES AND SERVICES | 24 |
| 5.1 | Basic Features and Services | 24 |
| 6 | TECHNICAL CHARACTERISTICS | 25 |
| 6.1 | Mechanical Characteristics..... | 25 |
| | Table 5: Mechanical characteristics..... | 25 |
| 7 | USING FASTRACK SUPREME IESM-ETHERNET | 26 |
| 7.1 | Getting Started..... | 26 |
| 7.1.1 | Installing IESM-Ethernet | 26 |
| 7.1.2 | IESM-Ethernet Quick Check | 27 |
| 7.1.3 | Ethernet Check | 29 |

| | | |
|-----------|--|-----------|
| 7.2 | IESM-Ethernet Operational Status | 32 |
| 8 | TROUBLESHOOTING | 32 |
| 8.1 | No Communication with IESM-Ethernet through the Serial Link..... | 32 |
| 9 | FUNCTIONAL DESCRIPTION | 34 |
| 9.1 | Architecture..... | 35 |
| 9.2 | IESM-Ethernet Electrical Characteristics | 36 |
| 9.2.1 | Power Supply | 36 |
| 9.2.2 | Extra Current Consumption from the DC-IN Source | 36 |
| 9.3 | USB 2.0 Interface | 37 |
| 9.4 | RJ45 Ethernet Interface Socket..... | 37 |
| 9.5 | Environmental Characteristics | 38 |
| 9.6 | Conformity..... | 40 |
| 10 | CONNECTOR AND PERIPHERAL DEVICES REFERENCES | 41 |
| 10.1 | General Purpose Connector References | 41 |
| 11 | SAFETY RECOMMENDATIONS | 42 |
| 11.1 | General Safety | 42 |
| 11.2 | Vehicle Safety | 43 |
| 11.3 | Care and Maintenance..... | 43 |
| 11.4 | Your Responsibility | 43 |
| 12 | ONLINE SUPPORT | 44 |

List of Figures

| | |
|---|----|
| Figure 1: Complete package contents | 15 |
| Figure 2: Packaging box | 16 |
| Figure 3: Production sticker | 17 |
| Figure 4: IESM Ethernet general description | 18 |
| Figure 5: USB connector..... | 19 |
| Figure 6: 10-Pin Interface Socket..... | 20 |
| Figure 7: IESM 50-pin connector | 21 |
| Figure 8: IESM- Ethernet Dimensions | 25 |
| Figure 9: IESM-Ethernet Mounting | 26 |
| Figure 10: Functional architecture | 35 |

List of Tables

| | |
|---|----|
| Table 1: USB Pin Description | 19 |
| Table 2: 10 Pin Interface Socket Description | 20 |
| Table 3: IESM 50-pin connector description | 21 |
| Table 4: Basic features of IESM-Ethernet..... | 24 |
| Table 5: Mechanical characteristics | 25 |
| Table 6: IESM-Ethernet operational status..... | 32 |
| Table 7: Solutions for no connection with Fastrack Supreme through serial link..... | 33 |
| Table 8: Electrical characteristics | 36 |
| Table 9: Ethernet Power consumption | 36 |
| Table 10: Extra Current Consumption from DC-IN Source | 36 |
| Table 11: Ranges of temperature..... | 38 |
| Table 12: Environmental standard constraints..... | 39 |

1 References

1.1 Reference Documents

For more details, several reference documents may be consulted. The Wavecom reference documents are provided in the Wavecom documents package contrary to the general reference documents, which are not Wavecom owned.

1.1.1 Open AT® Software Documentation

- [1] Getting started with Open AT® Software Suite v2.01
(Ref.WM_DEV_OAT_UGD_058)
- [2] Tutorial for Open AT® IDE V1.06 (Ref. WM_DEV_OAT_UGD_044)
- [3] Tools Manual for Open AT® IDE V1.06 (Ref. WM_DEV_OAT_UGD_045)
- [4] Basic Development Guide for Open AT®V4.21
(Ref. WM_DEV_OAT_UGD_050)
- [5] ADL User Guide for Open AT® OS V6.01 (Ref. WM_DEV_OAT_UGD_060)

1.1.2 AT Software Documentation

- [6] AT commands interface Guide for Open AT® FW v7.1
(Ref. WM_DEV_OAT_UGD_059)
- [7] Open AT® Firmware v7.1 Customer Release Note
(Ref.WM_PGM_OAT_CRN_012)

1.1.3 Fastrack Supreme Related Documents

- [8] Fastrack Supreme User Guide (Ref. WA_DEV_Fastrk_UGD_001)

1.1.4 IESM Related Documents

- [9] IESM Product Technical Specifications (Ref. WA_DEV_Fastrk_PTS_001)
- [10] IESM-Ethernet Installation Guide (Ref.WA_Dev_Fastrk_UGD_015)

Note:

New versions of software may be available. Wavecom recommends customers to check the website for the latest documentation.

1.2 Abbreviations

| Abbreviation | Definition |
|-----------------|---|
| AC | Alternating Current |
| ACM | Accumulated Call Meter |
| AT | ATtention (prefix for Wireless CPU® commands) |
| CLK | CLock |
| CMOS | Complementary Metal Oxide Semiconductor |
| CS | Coding Scheme |
| CTS | Clear To Send |
| dB | Decibel |
| dBc | Decibel relative to the Carrier power |
| dB _i | Decibel relative to an Isotropic radiator |
| dBm | Decibel relative to one milliwatt |
| DC | Direct Current |
| DCD | Data Carrier Detect |
| DCE | Data Communication Equipment |
| DCS | Digital Cellular System |
| DSR | Data Set Ready |
| DTE | Data Terminal Equipment |
| DTMF | Dual Tone Multi-Frequency |
| DTR | Data Terminal Ready |
| EEPROM | Electrically Erasable Programmable Read-Only Memory |
| EFR | Enhanced Full Rate |
| E-GSM | Extended GSM |
| EMC | ElectroMagnetic Compatibility |
| EMI | ElectroMagnetic Interference |
| ESD | ElectroStatic Discharges |
| ETSI | European Telecommunications Standards Institute |
| FIT | Series of connectors (micro-FIT) |
| FR | Full Rate |
| FTA | Full Type Approval |
| GCF | Global Certification Forum |
| GND | GrouND |
| GPIO | General Purpose Input Output |

| Abbreviation | Definition |
|---------------------|---|
| GPRS | General Packet Radio Service |
| GPS | Global Positioning System |
| GSM | Global System for Mobile communications |
| HR | Half Rate |
| I | Input |
| IEC | International Electrotechnical Commission |
| IES | Internal Expansion Socket |
| IESM | Internal Expansion Socket Module |
| IMEI | International Mobile Equipment Identification |
| I/O | Input / Output |
| LED | Light Emitting Diode |
| MAX | MAXimum |
| ME | Mobile Equipment |
| MIC | MICrophone |
| Micro-Fit | Family of connectors from Molex |
| MIN | MINimum |
| MNP | Microcom Networking Protocol |
| MO | Mobile Originated |
| MS | Mobile Station |
| MT | Mobile Terminated |
| NOM | NOMinal |
| O | Output |
| Pa | Pascal (for speaker sound pressure measurements) |
| PBCCH | Packet Broadcast Control CHannel |
| PC | Personal Computer |
| PCL | Power Control Level |
| PDP | Packet Data Protocol |
| PIN | Personal Identity Number |
| PLMN | Public Land Mobile Network |
| PUK | Personal Unblocking Key |
| RF | Radio Frequency |
| RFI | Radio Frequency Interference |
| RI | Ring Indicator |
| RMS | Root Mean Square |

| Abbreviation | Definition |
|---------------------|---|
| RTS | R equest T o S end |
| RX | R eceive |
| SIM | S ubscriber I dentification M odule |
| SMA | S ub M iniature version A R F connector |
| SMS | S hort M essage S ervice |
| SNR | S ignal-to- N oise R atio |
| SPL | S ound P ressure L evel |
| SPK | S pea K er |
| SRAM | S tatic R AM |
| TCP/IP | T ransmission C ontrol P rotocol / I nternet P rotocol |
| TDMA | T ime D ivision M ultiple A ccess |
| TU | T ypical U rban fading profile |
| TUHigh | T ypical U rban, H igh speed fading profile |
| TX | T ransmit |
| TYP | TYP ical |
| USB | U niversal S erial B us |
| VSWR | V oltage S tationary W ave R atio |

2 Packaging

2.1 Contents

The complete package contents of the Fastrack Supreme IESM-Ethernet consists of the following:

- One piece packaging box (A)
- 100 pieces IESM-Ethernet (B)
- 100 pieces Backplate and Spring Contact (C)
- 100 pieces RJ45 Interface Cable (D)
- 3 Pieces Extraction Tool (E)
- Installation Guide (F)

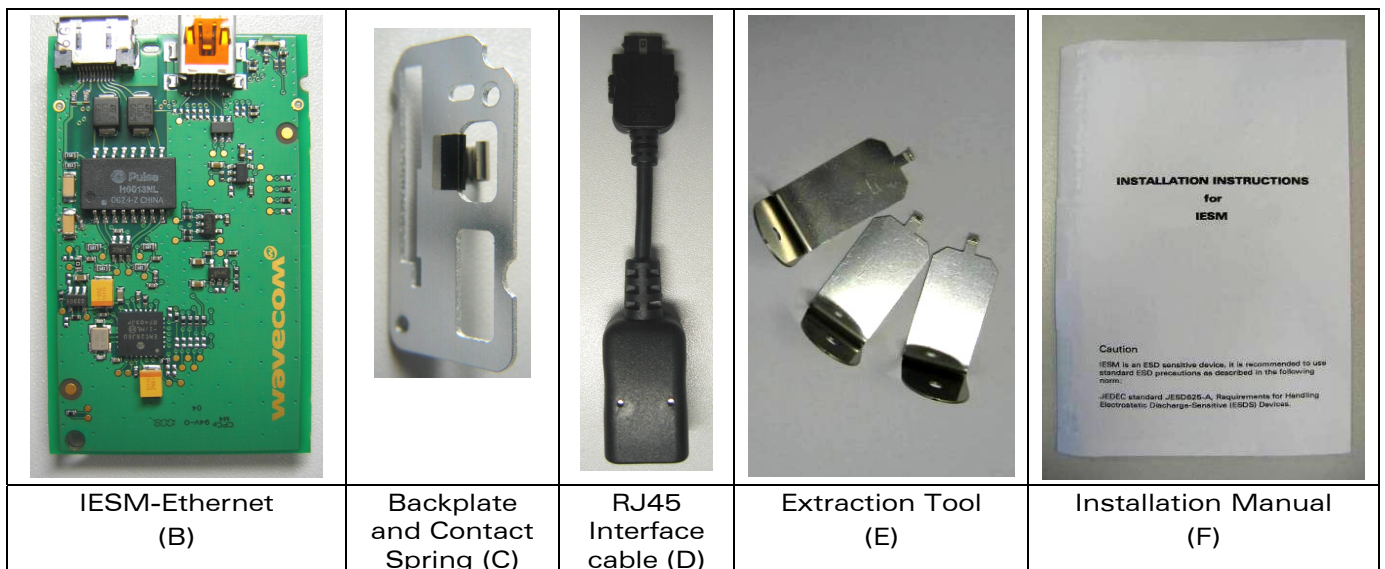
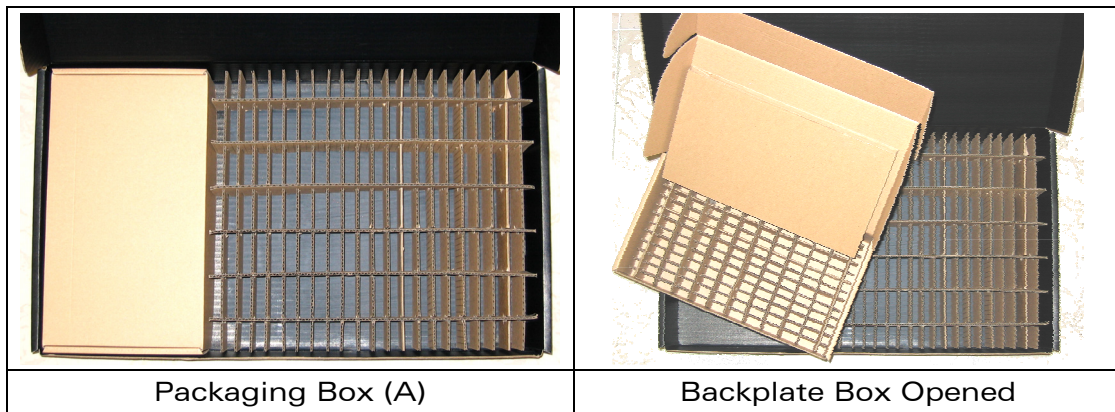


Figure 1: Complete package contents

2.2 Packaging Box

The packaging box external dimensions:

- width: 290 mm
- height: 65 mm
- length: 455 mm

Label placed indicates:

- WAVECOM logo
- Product reference (IESM-Ethernet)
- CE mark
- RoHS Logo



Figure 2: Packaging box

2.3 Production Sticker

Production and MAC address sticker (see Figure 3) are located at the back side of the IESM Ethernet board with the following information:

- Product Name (IESM Ethernet),
- Marketing Name (FSUE04),
- Barcode
- 17 Digit Serial Number
- MAC Address



Product Name and Serial Number Sticker



MAC Address Sticker

Figure 3: Production sticker

3 General Information

3.1 Description

The IESM-Ethernet description is shown below.

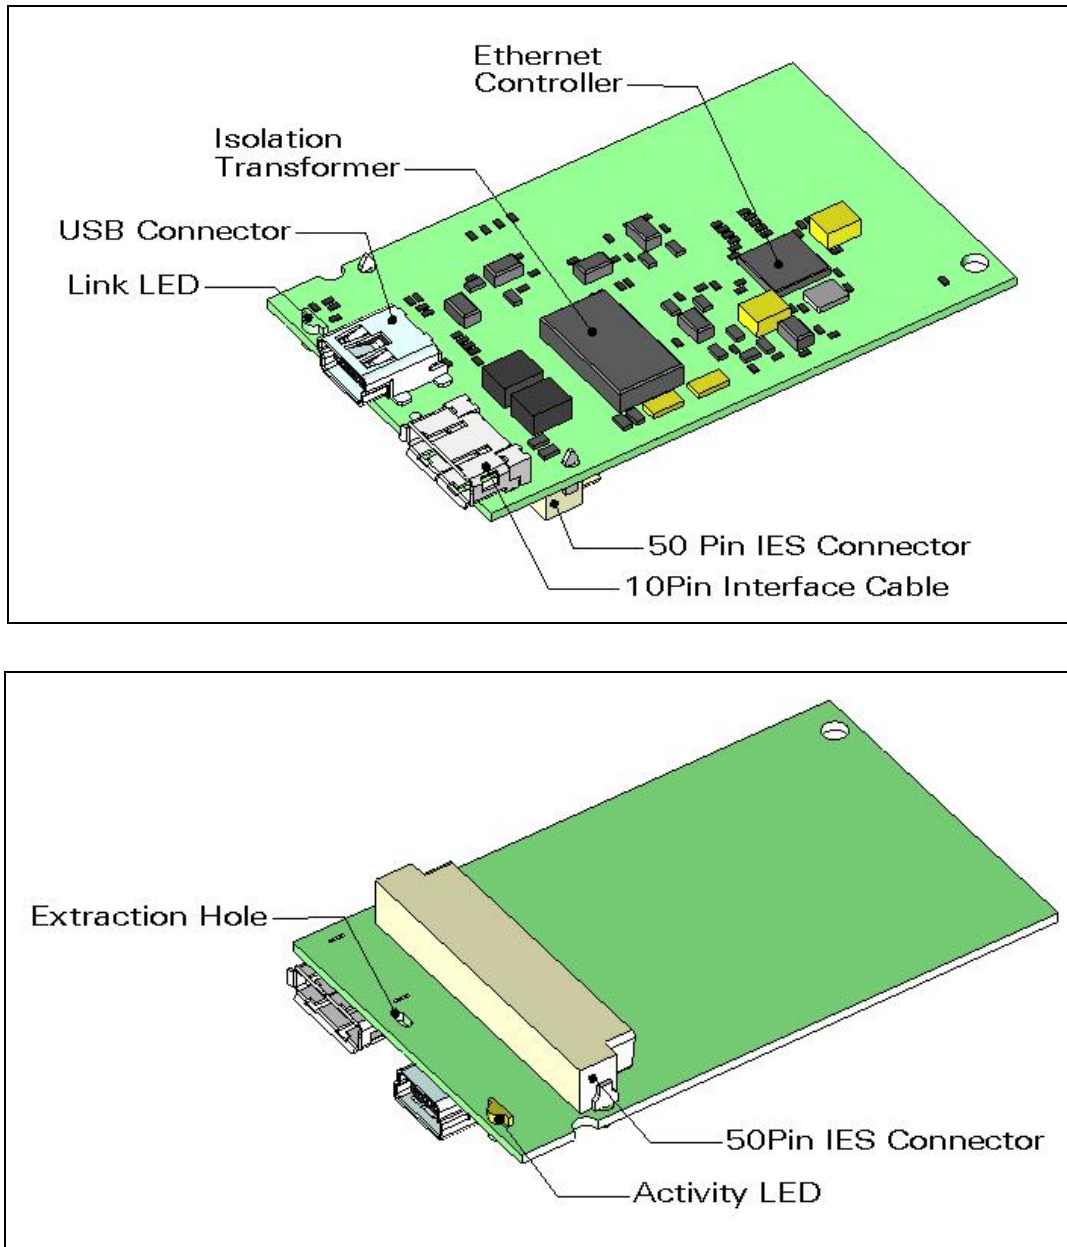


Figure 4: IESM Ethernet general description

3.2 External Connections

3.2.1 Mini-B USB Connector

Standard Mini-B USB connector for communicating with:

- Wireless CPU

This port is USB 2.0 compliant.

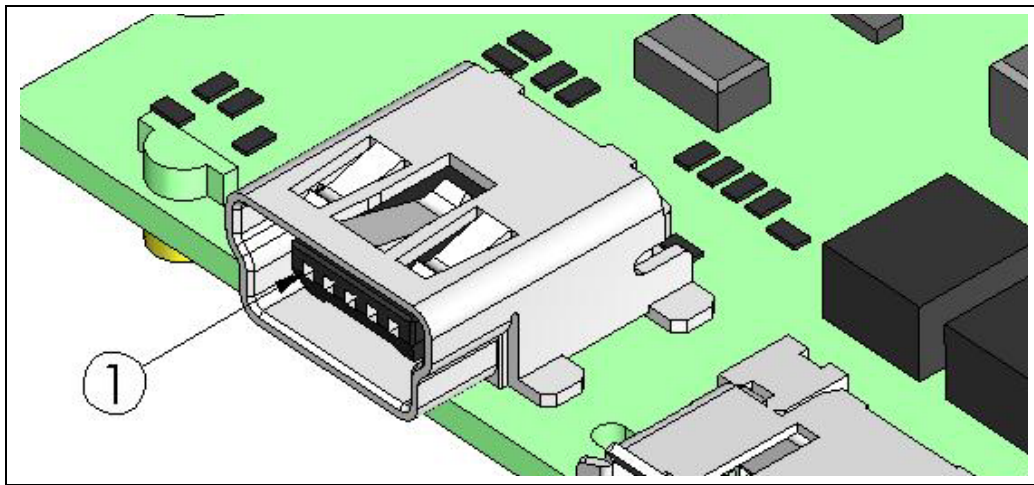


Figure 5: USB connector

For USB connector specifications please refer to Chapter 10, "Connector and Peripheral Devices References".

Table 1: USB Pin Description

| Pin # | Pin Description |
|-------|-----------------|
| 1 | VBUS |
| 2 | D- |
| 3 | D+ |
| 4 | NC |
| 5 | GND |

3.2.2 10-Pin Interface Socket

The 10-Pin socket is an external interface for the RJ-45 cable.

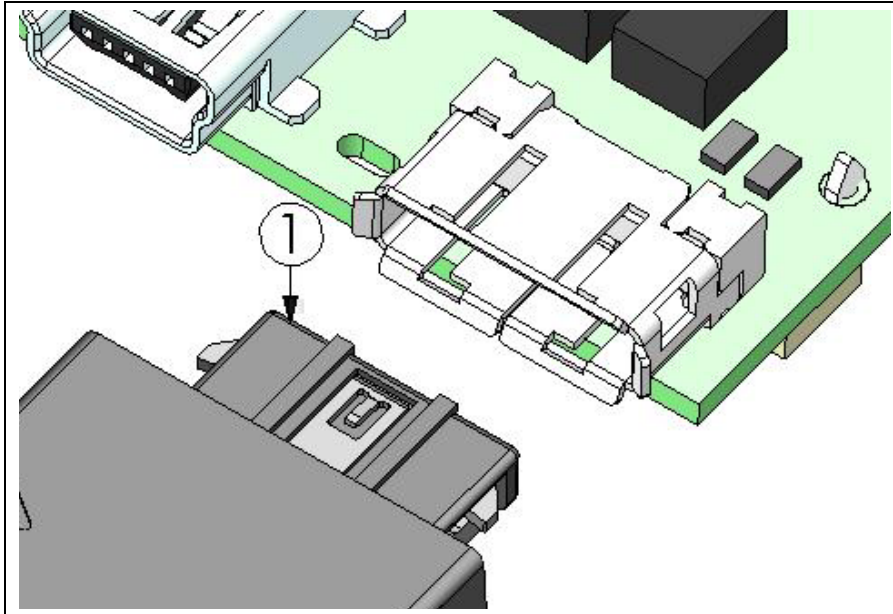


Figure 6: 10-Pin Interface Socket

Table 2: 10 Pin Interface Socket Description

| 10 Pin Plug | Description Name |
|-------------|------------------|
| 1 | DGND |
| 2 | TX_D1- |
| 3 | TX_D1+ |
| 4 | RX_D2- |
| 5 | RX_D2+ |
| 6 | BI_D3+ |
| 7 | BI_D3- |
| 8 | BI_D4+ |
| 9 | BI_D4- |
| 10 | DGND |

3.2.3 IES 50-pin Connector

IESM high density 50-pin connector is used for:

- IESM Interface with Fastrack Supreme motherboard

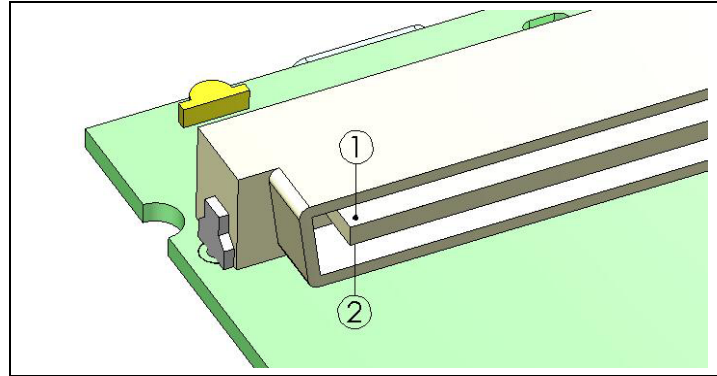


Figure 7: IESM 50-pin connector

For IESM 50-Pin connector specifications please refer to Chapter 10, "Connector and Peripheral Devices References".

Table 3: IESM 50-pin connector description

| Pin # | Pin Description | Pin # | Pin Description |
|-------|-----------------|-------|-----------------|
| 1 | GND | 26 | RTS2 |
| 2 | GND | 27 | SHTDN |
| 3 | Reserved | 28 | GPIO26 |
| 4 | Reserved | 29 | GPIO19 |
| 5 | Reserved | 30 | GPIO27 |
| 6 | Reserved | 31 | GPIO20 |
| 7 | VPAD-USB | 32 | INT0/GPIO3 |
| 8 | USB-DP | 33 | GPIO23 |
| 9 | USB-DM | 34 | GPIO22 |
| 10 | GSM-1V8 | 35 | DTR1-CT108/2 |
| 11 | GSM-2V8 | 36 | PCM-SYNC |
| 12 | BOOT | 37 | PCM-IN |
| 13 | RESET | 38 | PCM-CLK |
| 14 | AUX-ADC | 39 | PCM-OUT |
| 15 | SPI1-CS | 40 | AUX-DAC |
| 16 | SPI1-CLK | 41 | VCC-2V8 |
| 17 | SPI1-I | 42 | GND |

| | | | |
|----|----------|----|-------|
| 18 | SPI1-IO | 43 | DC-IN |
| 19 | SPI2-CLK | 44 | DC-IN |
| 20 | SPI2-IO | 45 | GND |
| 21 | SPI2-CS | 46 | 4V |
| 22 | SPI2-I | 47 | 4V |
| 23 | RXD2 | 48 | GND |
| 24 | TXD2 | 49 | GND |
| 25 | CTS2 | 50 | GND |

4 IESM Ethernet Basic Requirements

IESM Ethernet requires the necessary environment to function properly.

4.1 Ethernet Requirements

- Open AT Suite 2.x on Fastrack Supreme, please consult your distributor regarding this matter.
- Wavecom's sample Open AT Ethernet application must be running on Fastrack Supreme or customer's own developed application.

4.2 USB Requirements

- USB driver for Fastrack Supreme. Available on SDK V4.25 or later.

5 Features and Services

5.1 Basic Features and Services

Basic features of the IESM-Ethernet are summarized in the table below.

Table 4: Basic features of IESM-Ethernet

| Features | Description |
|----------------------|---|
| Open AT [®] | Open AT [®] programmable Native execution of embedded standard ANSI C applications Custom AT command creation Custom application library creation Standalone operation |
| LAN | IEEE 802.3 Compatible Integrated MAC and 10 BASE-T PHY Receiver and collision squelch circuit Supports one 10BASE-T port Supports Full and Half-Duplex modes Shielded RJ-45 |
| USB | USB 2.0 Compliant Mini-B Connector |
| Interfaces | AT command set based on V.25 or later and GSM 07.05 & 07.07. Open AT [®] interface for embedded application. |

6 Technical Characteristics

6.1 Mechanical Characteristics

Table 5: Mechanical characteristics

| | |
|--------------------------|--|
| PCB Dimensions | 58mm x 35.7mm x 1mm |
| Overall Dimension | 59.5 x 35.7 x 10.01mm (including connectors) |
| Weight | < 10 grams |

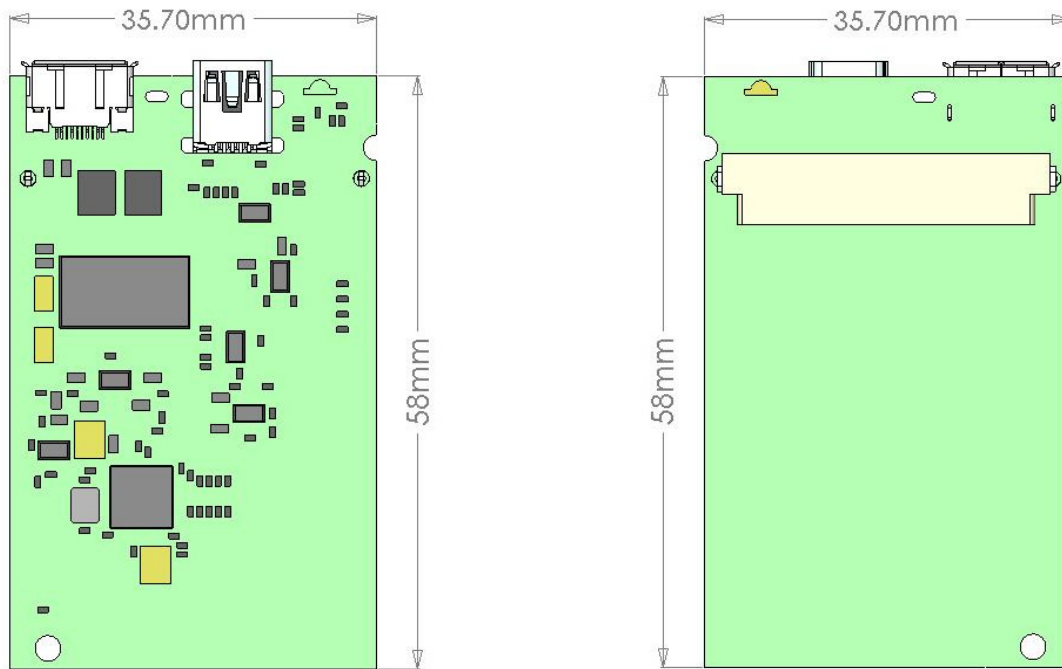


Figure 8: IISM- Ethernet Dimensions

7 Using Fastrack Supreme IESM-Ethernet

7.1 Getting Started

7.1.1 Installing IESM-Ethernet

To install the IESM-Ethernet please follow the procedures below. It is important to remove the power on Fastrack Supreme when performing this installation;

1. Remove the screws and the original backplate cover of Fastrack Supreme
2. Insert the IESM-Ethernet board. Replace the original backplate with the IESM-Ethernet backplate provided and place back the screws.
3. Attach the RJ45 Interface cable.


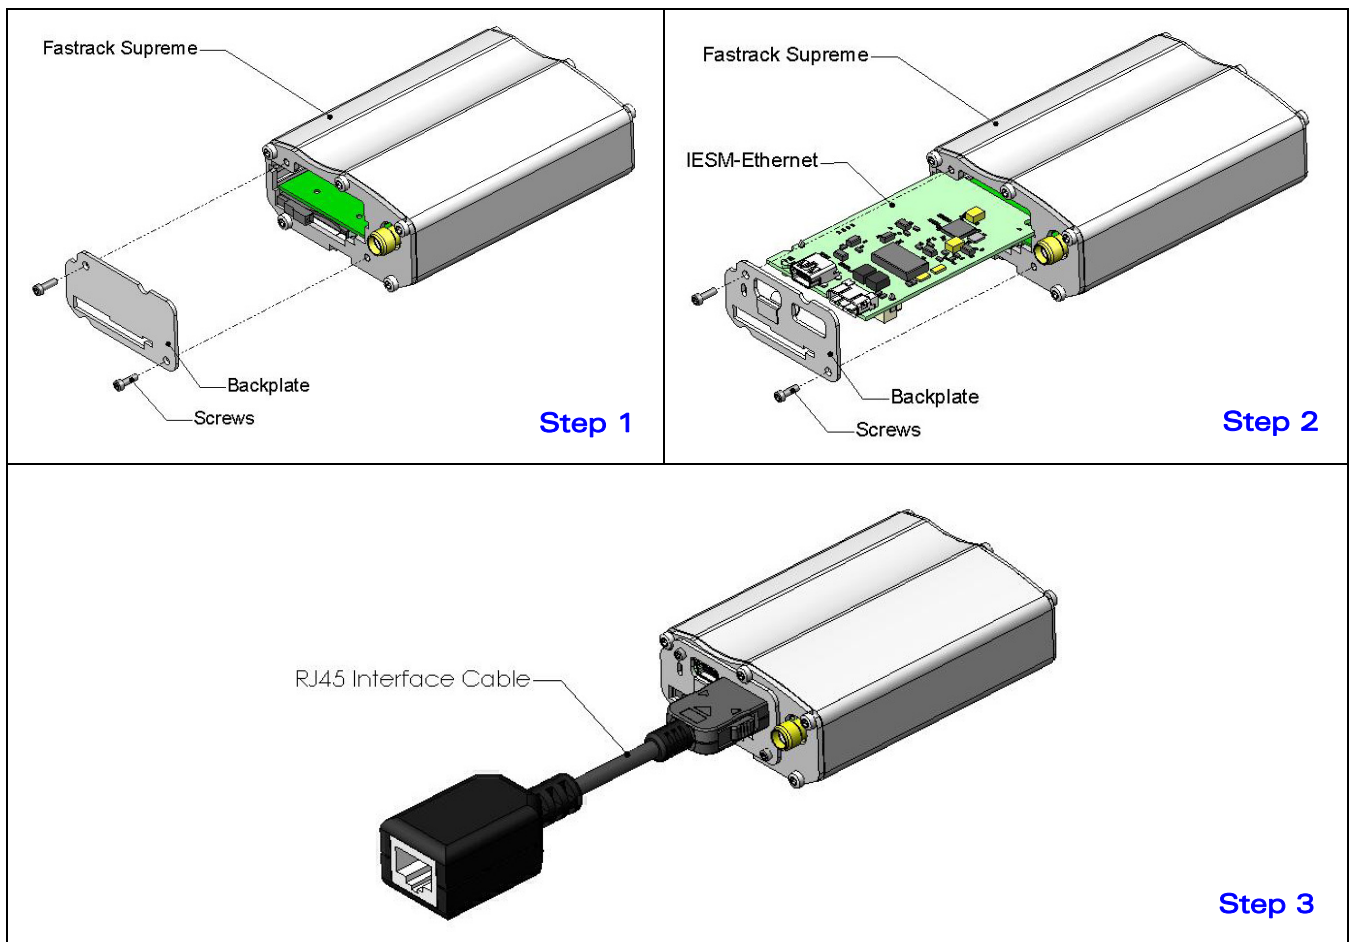


Figure 9: IESM-Ethernet Mounting


7.1.2 IESM-Ethernet Quick Check

To check if the installation of the IESM-Ethernet with Fastrack Supreme is ok, please perform a simple test on USB.

- 1 Connect a serial cable between Fastrack Supreme and PC COM port
- 2 Apply power on Fastrack Supreme
- 3 Open communication software (Hyperterminal), if COM port not configured yet please enter as follows;

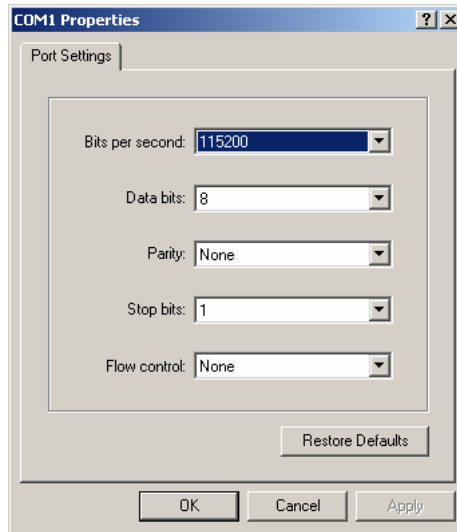

- 4 Activate the USB port, enter AT command shown below;
AT+WMFM=0,1,3
- 5 Connect USB cable between IESM and PC
- 6 PC running Windows should detect the new USB device. It will prompt to install the USB driver.
- 7 Install the USB driver on Fastrack Supreme, driver could be found on SDK V4.25.
- 8 Once USB driver is installed, open a new connection this time configure it to use the USB port

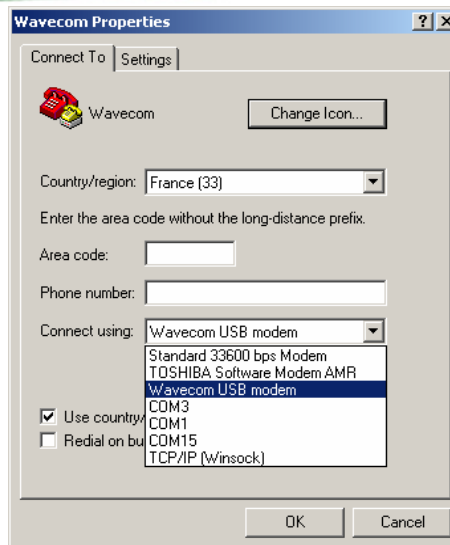

9 On the new communication window type the AT command shown below. This will echo on the screen what is being typed;

ATE1 → Fastrack Supreme responds "OK"

10 Enter the AT command as indicated below to check the manufacturer identification;

AT+CGMI → Fastrack Supreme responds "WAVECOM MODEM"

IESM is now properly installed. For further information on these AT commands and their associated parameters, refer to "AT Commands Interface Guide" [6].

7.1.3 Ethernet Check

Make sure the necessary Ethernet environment is already set-up in Fastrack Supreme.

- Wavecom Ethernet sample code or customer Open AT application is loaded
- Connect LAN Cable to the Ethernet RJ45 interface
- Apply power to Fastrack Supreme

Example: Running Wavecom's Ethernet sample code.

(ads_fastrack_ethernet_256KB.dwl)

| AT Command | Response | Remarks |
|------------|----------|------------------------------------|
| AT+WOPEN=1 | OK | Activates the Ethernet sample Code |

```

115200 - HyperTerminal
File Edit View Call Transfer Help
+WIND: 7
at
OK
at+wopen=1
OK

+WIND: 14

+WIND: 0
ENC28J60 driver test
[GPSR1]: initialized.
[GSM1]: initialized.
[UART1]: initialized.
[UART2]: initialized.
[I]: initialized.
WIP Initialized!
TCP test server started at port 32000
AT+ETH to start bearer

at+eth
OK
[ETHER]: open: -> DISCONNECTED
[ETHER]: start: -> CONNECTING
bearer ETHER started.
[ETHER]: DHCP UP -> CONNECTED
Bearer connected!
Local: 10.0.203.72 Netmask: 255.255.255.0
DNS1: 10.0.203.232 DNS2: 10.0.203.231
    
```

A normal operating IESM Ethernet displays the acquired IP address with Wavecom Ethernet sample code running.

Activating and Deactivating Ethernet Board

| AT Command | Response | Remarks |
|------------|----------|-----------------------------|
| AT+ETH =1 | OK | Turns ON Ethernet (default) |
| AT+ETH =0 | OK | Turns OFF Ethernet |

Setting DHCP address

| AT Command | Response | Remarks |
|----------------|------------------------------|---|
| AT+IPCONFIG =1 | OK | Sets to DHCP (Reset requires to take effect) |
| AT+IPCONFIG? | +IPCONFIG: 1,0 | IP is set to DHCP |
| AT+IPCONFIG? | +IPCONFIG: 0,1,"192.168.0.1" | IP is set to static IP 192.168.0.1 |

Setting Static IP address

| AT Command | Response | Remarks |
|----------------------------|-----------------------------|--|
| AT+IPCONFIG =0,192,168,0,1 | OK | Sets the Static IP address. AT+IPCONFIG =0,192,168,0,1 Sets to static IP IP Address (Reset requires to take effect) |
| AT+IPCONFIG? | +IPCONFIG:0,1,"192.168.0.1" | Interrogates the Static IP |
| AT+IPCONFIG? | +IPCONFIG: 1,0 | IP is set to DHCP |

Setting DNS IP address for static IP option

| AT Command | Response | Remarks |
|-----------------------|------------------------|--|
| AT+IPDNS =192,168,1,2 | OK | Sets the Static IP address. AT+IPDNS =192,168,1,2 IP DNS Address |
| AT+IPDNS? | +IPDNS:1,"192.168.1.2" | Interrogates the DNS IP |
| AT+IPDNS? | +IPDNS: 0 | "0" means DHCP is enable |

Setting Gateway IP address for static IP option

| AT Command | Response | Remarks |
|----------------------|-----------------------|--|
| AT+IPGW =192,168,1,1 | OK | Sets the Static IP address. AT+IPDNS = <u>192,168,1,1</u> , Gateway IP Address |
| AT+IPGW? | +IPGW:1,"192.168.1.1" | Interrogates the Gateway IP |
| AT+IPGW? | +IPGW: 0 | "0" means DHCP is enable |

Setting Netmask IP address for static IP option

| AT Command | Response | Remarks |
|-----------------------------|-------------------------|--|
| AT+IPNETMASK =255,255,255,0 | OK | Sets the Static IP address. AT+IPDNS = <u>255,255,255,0</u> , Netmask IP Address |
| AT+IPNETMASK? | +IPGW:1,"255.255.255.0" | Interrogates the Netmask IP |
| AT+IPNETMASK? | +IPNETMASK: 0 | "0" means DHCP is enable |

7.2 IESM-Ethernet Operational Status

The IESM-Ethernet operational status could be interpreted by the green and yellow LED located beside the USB connector.

| LED Description | Light Activity | Ethernet Status |
|-----------------------|----------------|--|
| Link LED (Green) | LED ON | Synch with the LAN/Router |
| | LED OFF | Not Synch with LAN/Router or Open AT not running |
| Activity LED (Yellow) | Blinking LED | Linked to network |
| | LED OFF | Not Synch with LAN/Router or Open AT not running |

Table 6: IESM-Ethernet operational status

8 Troubleshooting

This section describes possible problems might be encountered when using the Fastrack Supreme IESM-Ethernet.

To review other troubleshooting information, refer the 'FAQs' (Frequently Asked Questions) page at www.wavecom.com/fastracksupreme

8.1 No Communication with IESM-Ethernet through the Serial Link

If the Fastrack Supreme IES-Ethernet does not respond to AT commands through the USB or serial link, refer to the table below for possible causes and solutions.

Table 7: Solutions for no connection with Fastrack Supreme through serial link

| Symptoms | Check if | Action |
|-----------------------------------|--|--|
| Fastrack Supreme UART no response | <ul style="list-style-type: none"> Serial cable is connected on both sides? | <ul style="list-style-type: none"> Check the serial cable connection Fastrack Supreme UART factory setting is: <ul style="list-style-type: none"> Data bits = 8 Parity = none Stop bits = 1 Baud = 115 200 bps Flow control = hardware |
| | <ul style="list-style-type: none"> Power is applied? | <ul style="list-style-type: none"> Check Power Cable Check Fuse |
| | <ul style="list-style-type: none"> There is another program interfering with the communication program (i.e. Conflict on communication port access) | <ul style="list-style-type: none"> Close the interfering program |
| USB not detected | <ul style="list-style-type: none"> USB cable properly inserted? | <ul style="list-style-type: none"> Unplug cable from PC. Then plug back again if possible on another USB port on the PC. |
| | <ul style="list-style-type: none"> IISM powered properly? | <ul style="list-style-type: none"> Make sure the IISM board is plugged securely to the Fastrack Supreme |
| USB does not respond | <ul style="list-style-type: none"> USB port activated? | <ul style="list-style-type: none"> Send AT+WMFM=0,1,3 to activate USB |
| | <ul style="list-style-type: none"> USB driver installed? | <ul style="list-style-type: none"> Install USB driver (from SDK V4.25) |

9 Functional Description

The IESM-Ethernet is interfaced to the Fastrack Supreme mother board through the 50 pin connector. All the DC supplies are applied through this connector so no external supply is necessary.

With the Open AT[®] application running, the Fastrack Supreme motherboard communicates to IESM-Ethernet on SPI2.

Open AT[®] application controls the following;

- Data flow on the SPI2 bus between the Ethernet controller and Fastrack Supreme
- Enables/disables the internal LDOs of the Ethernet Controller and EEprom chip.
- Data access to the EEprom through I2C

USB is a four wire slave interface that complies with USB 2.0 protocol signaling. This can be used to communicate with the Wireless CPU or GPS module.

9.1 Architecture

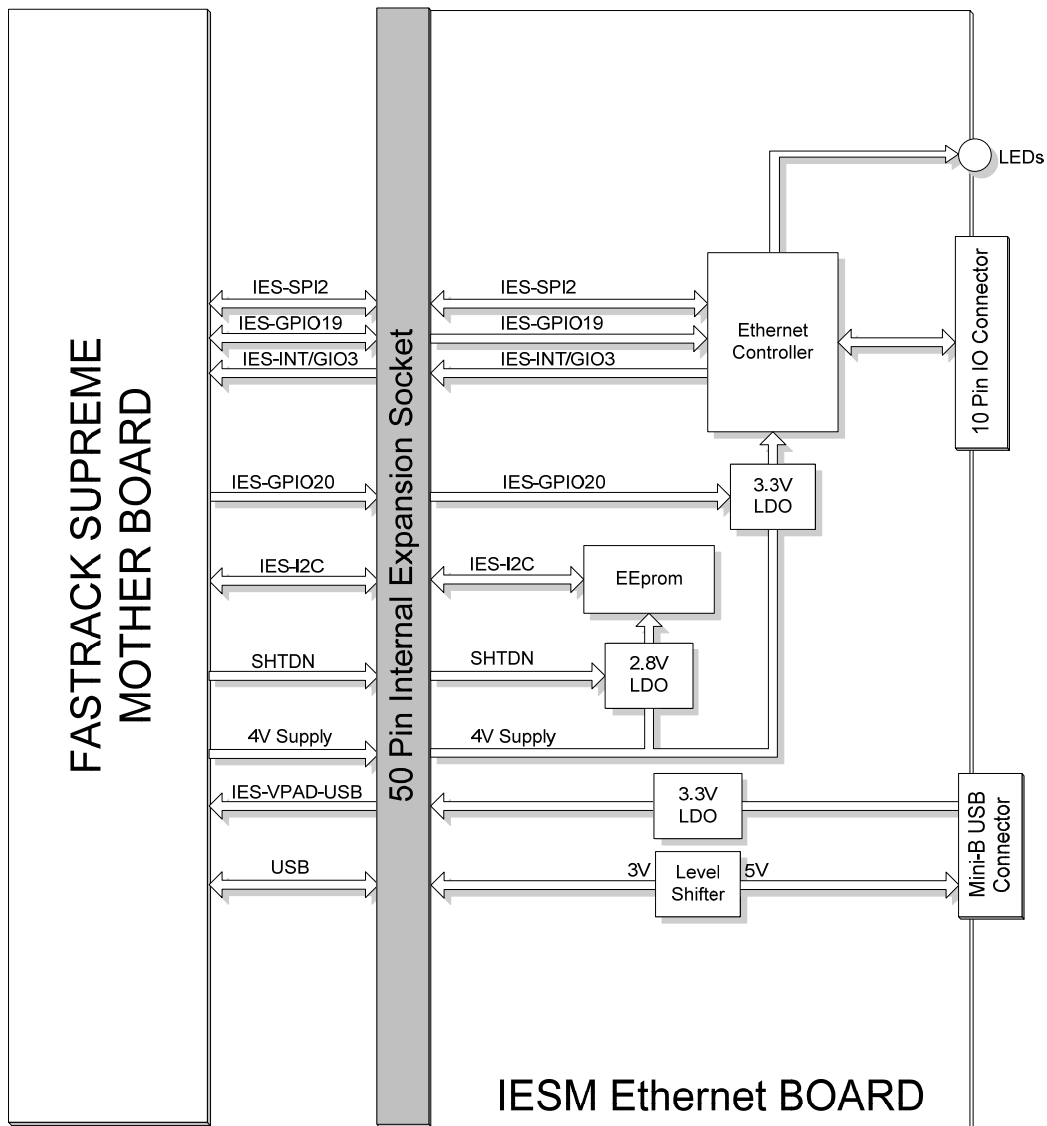


Figure 10: Functional architecture

9.2 IESM-Ethernet Electrical Characteristics

9.2.1 Power Supply

Table 8: Electrical characteristics

| | |
|-------------------|------|
| Operating Voltage | 4VDC |
|-------------------|------|

Note:

The IESM-Ethernet board is powered once the enable pins are activated by the Open AT® application. The following table describes the consumption at the IES interface based on operating conditions.

Table 9: Ethernet Power consumption

| Mode | Typ | Unit |
|---------------------|-----|------|
| Ethernet Powered ON | 150 | mA |

Note: The power consumption indicated excludes the active antenna consumption.

9.2.2 Extra Current Consumption from the DC-IN Source

Depending on various DC-IN voltage of Fastrack Supreme, the extra current consumption drawn by the Ethernet will be different.

Table 10: Extra Current Consumption from DC-IN Source

| Condition | | Extra current consumption for additional feature (mA) | | |
|-----------------------|------------------|---|----------|--------|
| Fastrack Supreme Mode | Ethernet Feature | @5.5VDC | @13.2VDC | @32VDC |
| Connected | Enabled | 101.3mA | 53.7mA | 20.8mA |
| | Enabled Idle | 115.9mA | 49.6mA | 24.0mA |
| Non-Connected | On Communication | 123.8mA | 52.9mA | 24.2mA |

9.3 USB 2.0 Interface

Is a 4-wire Mini USB slave interface that complies with USB 2.0.

The USB interface signals are VPAD-USB, USB-DP, USB-DM and GND.

USB interface features:

- 12Mbit/s full-speed transfer rate
- 5V typ compatible
- USB Softconnect feature
- Download feature is not supported by USB
- CDC 1.1 – ACM compliant

Pin description of the USB interface

| Signal | Mini USB Pin number | I/O | I/O type USB Standard | Description |
|----------|---------------------|-----|-----------------------|--------------------------------------|
| VPAD-USB | 1 | I | VBUS | +5V USB Power Supply |
| USB-DM | 2 | I/O | D- | Differential data interface negative |
| USB-DP | 3 | I/O | D+ | Differential data interface positive |
| ID | 4 | - | - | NC |
| GND | 5 | - | GND | Ground |

9.4 RJ45 Ethernet Interface Socket

Is a standard 10BASE-T interface that complies with IEEE 802.3 specifications. The RJ45 interface signals are as follows;

Pin description of the RJ45 interface

| RJ45 Socket Pin number | I/O | Signal | Description |
|------------------------|-----|----------------------|-------------------------------------|
| 1 | O | TD+ | Differential data transmit positive |
| 2 | O | TD- | Differential data transmit negative |
| 3 | I | RD+ | Differential data receive positive |
| 4 | - | Not used by 10BASE-T | |
| 5 | - | Not used by 10BASE-T | |
| 6 | I | RD- | Differential data receive positive |
| 7 | | Not used by 10BASE-T | |
| 8 | | Not used by 10BASE-T | |

9.5 Environmental Characteristics

The IISM-Ethernet is compliant with the following operating class. To ensure the proper operation of the IISM-Ethernet, the temperature of the environment must be within a specific range as described in the table below.

Table 11: Ranges of temperature

| Conditions | Temperature range |
|---------------------|-------------------|
| Operating / Class A | 0 °C to +55°C |
| Operating / Class B | 0 °C to +65°C |
| Storage | -40 °C to +85°C |

Function Status Classification:

Class A:

The IISM-Ethernet remains fully functional across the specified temperature range.

Class B:

The IISM-Ethernet remains fully functional, across the specified temperature range. Some parameters may occasionally deviate from the specified requirements and this deviation does not affect the ability of the IISM-Ethernet to be fully functional.

The detailed climatic and mechanics standard environmental constraints applicable to the Fastrack Supreme are listed in the next table:

Table 12: Environmental standard constraints

| Environmental Tests (IEC TR 60721-4) | | Environmental Classes (IEC 60721-3) | | | |
|---|--------------------------------|---|---|--|--|
| Tests | Standards | Storage (IEC 60721-3-1) Class IE13 | Transportation (IEC 60721-3-2) Class IE23 | Operation | |
| | | | | Stationary (IEC 60721-3-3) Class IE35 | Non-Stationary (IEC 60721-3-7) Class IE73 |
| Cold | IEC 60068-2-1 : Ab/Ad | -25°C, 16 h | -40°C, 16 h | -5°C, 16 h | -5°C, 16 h |
| Dry heat | IEC 60068-2-2 : Bb/Bd | +70°C, 16 h | +70°C, 16 h | +55°C, 16 h | +55°C, 16 h |
| Change of temperature | IEC 60068-2-14 : Na/Nb | -33°C to ambient 2 cycles, t1=3 h 1 °C.min ⁻¹ | -40°C to ambient 5 cycles, t1=3 h t2<3 min | -5°C to ambient 2 cycles, t1=3 h 0,5 °C.min ⁻¹ | -5°C to ambient 5 cycles, t1=3 h t2<3 min |
| Damp heat | IEC 60068-2-56 : Cb | +30°C, 93% RH 96 h | +40°C, 93% RH 96 h minimum | +30°C, 93% RH, 96 h | +30°C, 93% RH, 96 h |
| Damp heat, cyclic | 60068-2-30 : Db Variant 1 or 2 | +40°C, 90% to 100% RH One cycle Variant 2 | +55°C, 90% to 100% RH Two cycles Variant 2 | +30°C, 90% to 100% RH Two cycles Variant 2 | +40°C, 90% to 100% RH Two cycles Variant 1 |
| Vibration (sinusoidal) | IEC 60068-2-6 : Fc | 1-200 Hz 2 m.s ⁻² 0,75 mm 3 axes 10 sweep cycles | 1-500 Hz 10 m.s ⁻² 3,5 mm 3 axes 10 sweep cycles | 1-150 Hz 2 m.s ⁻² 0,75 mm 3 axes 5 sweep cycles | 1-500 Hz 10 m.s ⁻² 3,5 mm 3 axes 10 sweep cycles |
| Vibration (random) | IEC 60068-2-64 : Fh | - | 10-100 Hz / 1,0 m ² .s ⁻³ 100-200 Hz / -3 dB.octave ⁻¹ 200-2000 Hz / 0,5 m ² .s ⁻³ 3 axes 30 min | - | - |
| Shock (half-sine) | IEC 60068-2-27 : Ea | - | - | 50 m.s ⁻² 6 ms 3 shocks 6 directions | 150 m.s ⁻² 11 ms 3 shocks 6 directions |
| Bump | IEC 60068-2-29 : Eb | - | 250 m.s ⁻² 6 ms 50 bumps vertical direction | - | - |
| Free fall | ISO 4180-2 | - | Two falls in each specified attitude | - | 2 falls in each specified attitude 0,025 m (<1kg) |
| Drop and topple | IEC 60068-2-31 : Ec | - | One drop on relevant corner One topple about each bottom edge | - | One drop on each relevant corner One topple on each of 4 bottom edges |

Notes:

Short description of Class IE13 (For more information see standard IEC 60721-3-1)

"Locations without controlled temperature and humidity, where heating may be used to raise low temperatures, locations in buildings providing minimal protection against daily variations of external climate, prone to receiving rainfall from carrying wind".

Short description of Class IE23 (For more information, see standard IEC 60721-3-2)

"Transportation in unventilated compartments and in conditions without protection against bad weather, in all sorts of trucks and trailers in areas of well developed road network, in trains equipped with buffers specially designed to reduce shocks and by boat".

Short description of Class IE35 (For more information see standard IEC 60721-3-3)

"Locations with no control on heat or humidity where heating may be used to raise low temperatures, to places inside a building to avoid extremely high temperatures, to places such as hallways, building staircases, cellars, certain workshops, equipment stations without surveillance".

Short description of Class IE73 (For more information see standard IEC 60721-3-7)

"Transfer to places where neither temperature nor humidity are controlled but where heating may be used to raise low temperatures, to places exposed to water droplets, products can be subjected to ice formation, these conditions are found in hallways and building staircases, garages, certain workshops, factory building and places for industrial processes and hardware stations without surveillance".

9.6 Conformity

The complete product complies with the essential requirements of article 3 of R&TTE 1999/5/EC Directive and satisfied the following standards:

| Domain | Applicable standard |
|---|--|
| Safety standard | EN 60950 (ed.1999) |
| Efficient use of the radio frequency spectrum | EN 301 419-(v 4.1.1) EN 301 511 (V 7.0.1) |
| EMC | EN 301 489-1 (edition 2002) EN 301 489-7 (edition 2002) |
| Global Certification Forum – Certification Criteria | GCF-CC V3.13.0 |
| FCC | FCC Part 15 FCC Part 22, 24 |
| IC | RSS-132 Issue 2 RSS-133 Issue 3 |

10 Connector and Peripheral Devices References

10.1 General Purpose Connector References

GPC is a 50-pin plug connector with 0.5mm pitch from Kyocera Elco:

14 5078 050 515 861+



AVX

14-5078-050-515-86:

Mini USB connector with 0.8mm pitch from Molex:

54819-0572



Molex

548190572_sd.pdf

10 Pin Socket with 0.5mm pitch from Hirose:

ST60-10P



ST60-10P.pdf

More information is also available from;

<http://www.avxcorp.com/>

<http://www.molex.com/>

11 Safety recommendations

11.1 General Safety

It is important to follow any special regulations regarding the use of radio equipment due in particular to the possibility of radio frequency (RF) interference. Please follow the safety advice given below carefully.

Switch OFF your Wireless CPU®:

- When in an aircraft. The use of cellular telephones in an aircraft may endanger the operation of the aircraft, disrupt the cellular network and is illegal. Failure to observe this instruction may lead to suspension or denial of cellular telephone services to the offender, or legal action or both,
- When at a refueling point,
- When in any area with a potentially explosive atmosphere which could cause an explosion or fire,
- In hospitals and any other place where medical equipment may be in use.

Respect restrictions on the use of radio equipment in:

- Fuel depots,
- Chemical plants,
- Places where blasting operations are in progress,
- Any other area where signalization reminds that the use of cellular telephone is forbidden or dangerous.
- Any other area where you would normally be advised to turn off your vehicle engine.

There may be a hazard associated with the operation of your Supreme Plug & Play close to inadequately protected personal medical devices such as hearing aids and pacemakers. Consult the manufacturers of the medical device to determine if it is adequately protected.

Operation of your Supreme Plug & Play close to other electronic equipment may also cause interference if the equipment is inadequately protected. Observe any warning signs and manufacturers' recommendations.

The Supreme Plug & Play is designed for and intended to be used in "**fixed**" and "**mobile**" applications:

- "**Fixed**" means that the device is physically secured at one location and is not able to be easily moved to another location.
- "**Mobile**" means that the device is designed to be used in other than fixed locations and generally in such a way that a separation distance of at least 20 cm (8 inches) is normally maintained between the transmitter's antenna and the body of the user or nearby persons.

The Supreme Plug & Play is not designed for and intended to be used in portable applications (within 20 cm or 8 inches of the body of the user) and such uses are strictly prohibited.

11.2 Vehicle Safety

Do not use your Supreme Plug & Play while driving, unless equipped with a correctly installed vehicle kit allowing 'Hands-Free' Operation.

Respect national regulations on the use of cellular telephones in vehicles. Road safety always comes first.

If incorrectly installed in a vehicle, the operation of Supreme Plug & Play telephone could interfere with the correct functioning of vehicle electronics. To avoid such problems, make sure that the installation has been performed by a qualified personnel. Verification of the protection of vehicle electronics should form part of the installation.

The use of an alert device to operate a vehicle's lights or horn on public roads is not permitted.

11.3 Care and Maintenance

Your Supreme Plug & Play is the product of advanced engineering, design and craftsmanship and should be treated with care. The suggestion below will help you to enjoy this product for many years.

Do not expose the Supreme Plug & Play to any extreme environment where the temperature or humidity is high.

Do not use or store the Supreme Plug & Play in dusty or dirty areas. Its moving parts (SIM holder for example) can be damaged.

Do not attempt to disassemble the Wireless CPU®. There are no user serviceable parts inside.

Do not expose the Supreme Plug & Play to water, rain or spilt beverages. It is not waterproof.

Do not abuse your Supreme Plug & Play by dropping, knocking, or violently shaking it. Rough handling can damage it.

Do not place the Supreme Plug & Play alongside computer discs, credit or travel cards or other magnetic media. The information contained on discs or cards may be affected by the Wireless CPU®.

The use of third party equipment or accessories, not made or authorized by Wavecom may invalidate the warranty of the Wireless CPU®.

Do contact an authorized Service Center in the unlikely event of a fault in the Wireless CPU®.

11.4 Your Responsibility

This Supreme Plug & Play is under your responsibility. Please treat it with care respecting all local regulations. It is not a toy. Therefore, keep it in a safe place at all times and out of the reach of children.


Try to remember your Unlock and PIN codes. Become familiar with and use the security features to block unauthorized use and theft.

12 Online Support

Wavecom provides an extensive range on online support which includes the following areas of Wavecom's wireless expertise:

- the latest version of this document
- new versions of our Operating System user guides
- comprehensive support for Open AT[®]
- regulatory certifications
- carrier certifications
- application notes

To gain access to this support, simply visit our web site at www.wavecom.com and click on "Support". Privileged access via user login is provided to Wavecom authorized distributors.

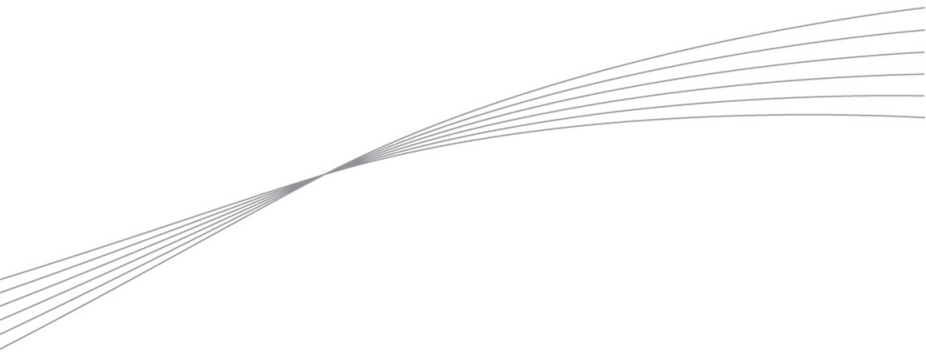

wavecom 

Make it wireless

WAVECOM S.A. - 3 esplanade du Foncet - 92442 Issy-les-Moulineaux Cedex - France - Tel: +33(0)1 46 29 08 00 - Fax: +33(0)1 46 29 08 08
Wavecom, Inc. - 430 Davis Drive - Suite 300 - Research Triangle Park, NC 27709 - USA - Tel: +1 919 237 4000 - Fax: +1 919 237 4140
WAVECOM Asia Pacific Ltd. - Unit 201-207, 2nd Floor - Bio-Informatics Centre - No. 2 Science Park West Avenue - Hong Kong Science Park,
Shatin - New Territories, Hong Kong - Tel: +852 2824 0254 - Fax: +852 2824 0255

www.wavecom.com